

141*208, 单黑正反面印刷

PLMP2A Operation Manual

Thank you for choosing our 2 in 1 Car Charger (with FM Transmitter function).
To operate this product correctly, please read the manual before operation.

Features:

- ※ Two-In-One Car Charger & FM Transmitter
- ※ Input Voltage: 12-24V - Output Power: 5V DC / 2.1A
- ※ Charges Most Smart Phones, Tablets, & Electronic Devices W/ USB Power
- ※ Supports USB Flash Drive & Aux-In Function
- ※ Frequency range: 87.5-108.0 MHZ
- ※ Supports MP3 And WMA Format Files
- ※ LCD Display Screen W/ Counter Display
- ※ Low Profile, Sleek Design

Instruction:

- ※ First, please insert this 2 in 1 Car Charger into your vehicle's cigarette lighter or power port.

Car Charger Function


- ※ Please connect your mobile phone into the USB port via your devices included charging cable.
Charging output: 5V/2.1A.

Remark: Due to the different protocol of iPad, there are two ways to charge iPad:

- ※ Long press "CH" button to switch the mode to "CHR", then connect iPad to the USB port for charging. When charging is finished, long press "CH" button again to switch the mode to "USB" reading;
- ※ In addition, you can insert the charging cable to the USB port firstly before connect the charger into cigarette lighter. And then insert it to cigarette lighter, it will charge iPad directly. (No need to press "CH" button)

FM Transmitter Function

- ※ Tune your radio to the desired FM frequency, then match that same frequency on the player by pressing the buttons on the unit.
- ※ Plug the USB disk into USB slot or connect other player devices via the 1/8" (3.5 mm) aux-input by using the provided 1/8" to 1/8" headphone cable. The 2 in 1 car charger will play and transmit the files automatically. **Note: you can enjoy music via the 1/8" aux-in port while using the USB port for charging your mobile phone.**

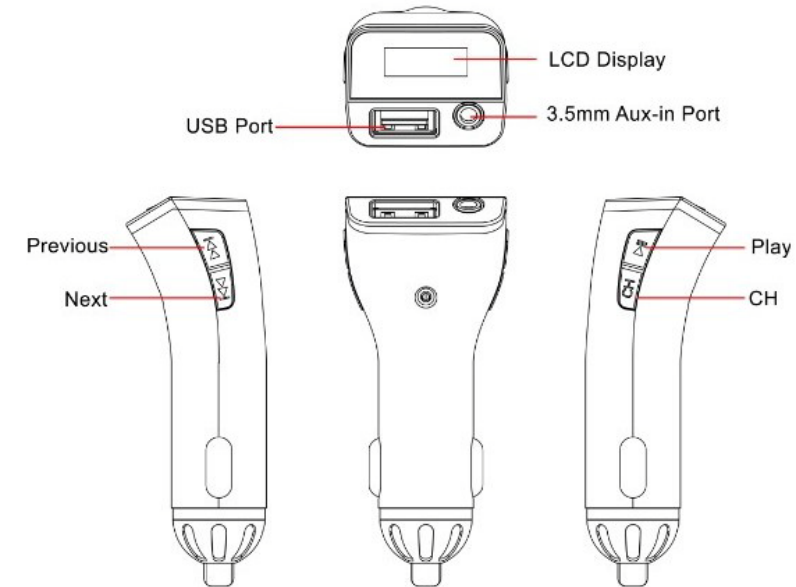

Operation Guide:

Operation Guide	FM transmitter
1、 How to play and stop	Press the "PLAY" button : Play the music Press the "PLAY" button again: Stop
2、 How to adjust the Volume	Long Press the "▶▶" button: Increase the Volume; Long press the "◀◀" button: Decrease the Volume
3、 How to change the frequency	Press "CH" first, then short Press the "▶▶" button: Increases the frequency Press "CH" first, then short Press the "◀◀" button: Decreases the frequency
4、 How to choose music	Short Press the "▶▶" Button to play the next song; Short Press the "◀◀" Button to play the previous song;
5. How to change play mode	Long press the "play/pause" button to switch the play modes: All, Folder, Random, or Repeat Track

Visit us @ www.pyleusa.com